



Enter Data Format



Clear All Data Formats

# Hyperion 1300g



DEFAULT.

## Standard Product Default Settings



Add CR Suffix

### ***Trigger***

The following bar codes will allow you to use the reader in Manual Trigger mode (need to press the trigger to read), Automatic Trigger mode (the beam is always on), or Presentation mode (the reader is activated when it "sees" a bar code).



Manual Trigger  
(Default)



Automatic Trigger



Presentation Mode



Save